

UNINSURED UNITED PARACHUTE TECHNOLOGIES, LLC.



SPLIT RSL-VECTOR 3 INSTALLATION INSTRUCTIONS

P/N: N/A

The following instructions supersede the instructions given in Section 3, Page 32 of the Vector 3 Owner's Manual Rev 0 dated 11/26/2003.

THIS TASK COVERS:

Installation, Packing

INITIAL SETUP:

Tools

None required

Equipment Condition

Lay out on packing table or other suitable area.

Materials/Parts

1 ea. split V3 RSL lanyard

P/N: 025-001-005

or

P/N: 025-001-006 (extended)

Personnel Required

Parachute Rigger

Scope

Beginning January 2009, United Parachute Technologies made this improvement to the integrated RSL. This improvement was designed and engineered to further enhance the performance of our product and the safety of our customers.

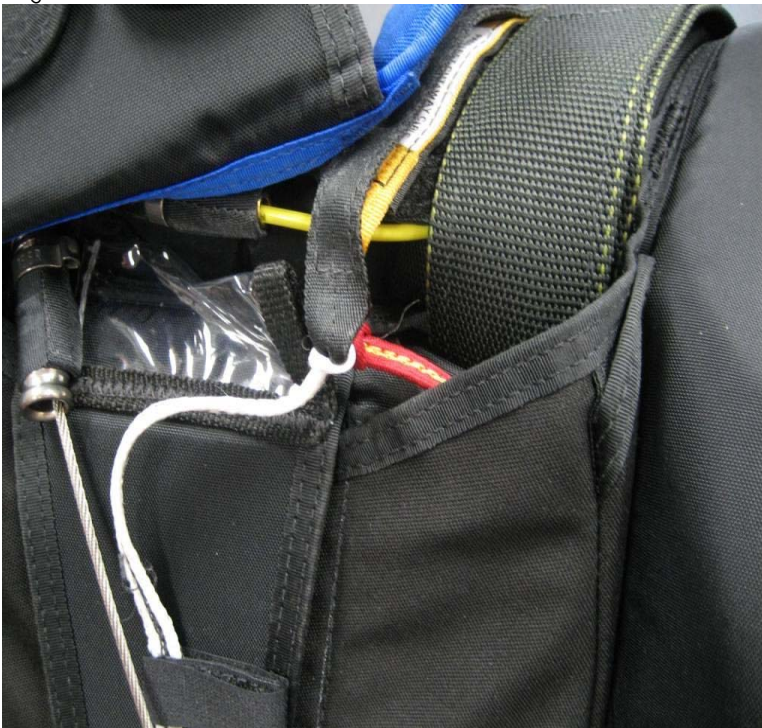


Figure 1



Make sure the left hand (exposed) yellow breakaway cable passes through the yellow Collins Lanyard loop at the end of the RSL. The Sky Hook should not be used without a Collins lanyard.

Figure 2



After packing the reserve, the black section of RSL lanyard should lay on top of the yellow Collins lanyard under the yoke.