

# UNINSURED UNITED PARACHUTE TECHNOLOGIES, LLC.




## New Sigma II 340 and 370 Brake Setting Instructions

Please refer to the Sigma Tandem System Owner's Manual for Assembly Instructions.

### Note:

The Sigma II 340 and 370 canopies now no longer have a cat's eye brake setting on the secondary control line.

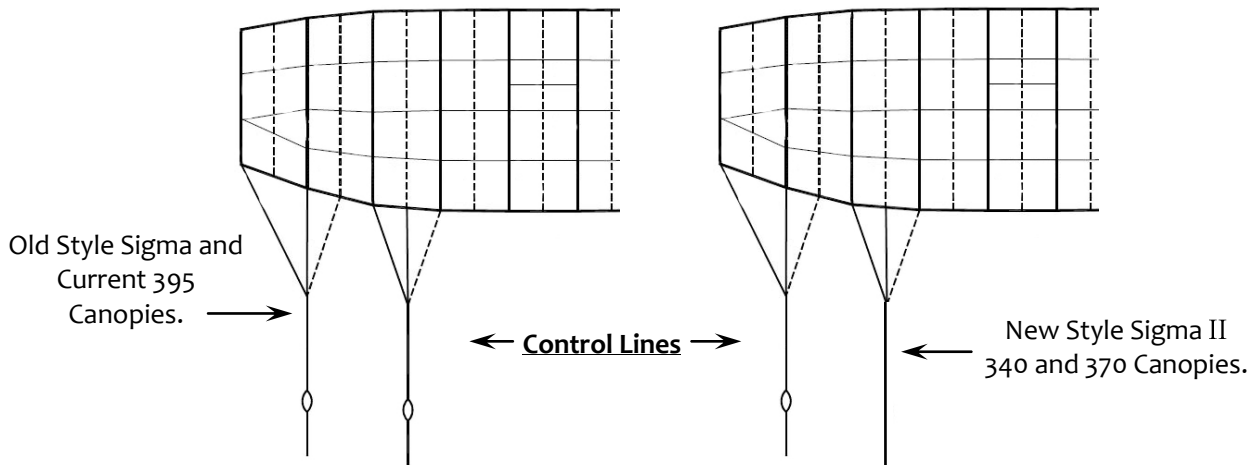

### Setting the Brakes:

**Note:** The following instructions shown using Sigma Velcro less type Risers.

- Step 1, Feed the stow loop through the red color coded cats-eye on primary brake line (Fig. a).
- Step 2, Pull head of primary toggle through the stow loop; setting brakes (Fig. b).
- Step 3, Neatly stow excess brake line in elastic keepers as shown (Fig. c).



## ENGINEERING DEPARTMENT

1645 LEXINGTON AVENUE ♦ DELAND FL 32724-2106 ♦ TELEPHONE +1 386 736 7589 ♦ FAX +1 386 734 7537  
 upt@uptVECTOR.COM ♦ WWW.UPTVECTOR.COM