



Mutant Belly Band Buffer Installation

Overview

Field installation for Belly Band Buffer on Mutant Belly band.

Personel

FAA Master Rigger or Foreign Equivalent

Machines/Tools required

Marking Pencil
Tacking needle
Super tac

Procedure

To install buffer between belly band and buckle.

ENGINEERING DEPARTMENT

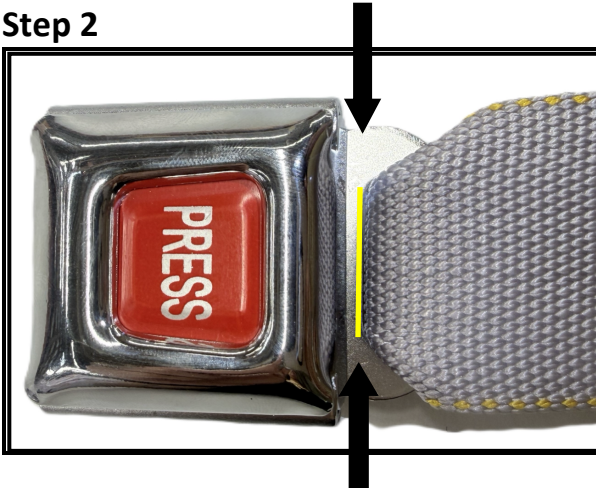
1645 LEXINGTON AVENUE ♦ DELAND FL 32724-2106 ♦ TELEPHONE +1 386 736 7589 ♦ FAX +1 386 734 7537

UPT@UPTVECTOR.COM ♦ WWW.UPTVECTOR.COM

UPT Instruct- Mutant Belly Band Buffer Installation-082

Step 1

Take buffer folding it in half making a center line.

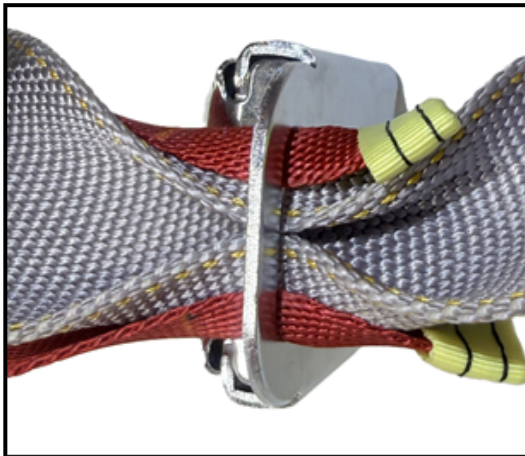
Step 2

Take belly band and make a center line on the type 7 webbing going through loop.

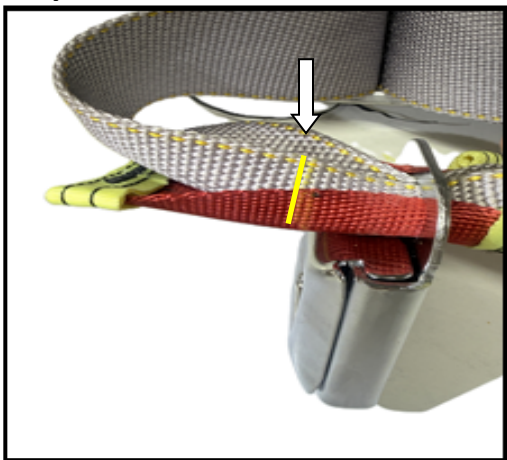


Step 3

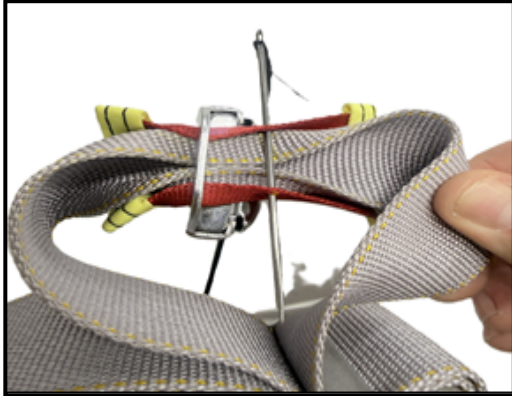
Place buffer through buckle loop over the type 7 webbing , and pull the buffer through, between buckle and belly band.

Step 4

Fold buffer over Belly band to cover type 7.

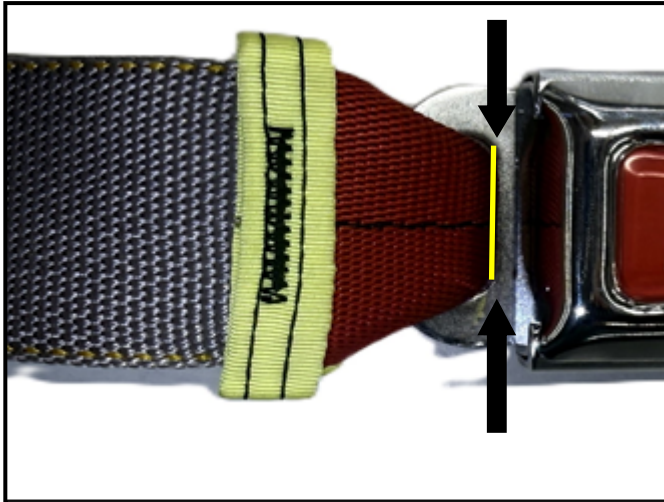
Step 5

Make sure both center lines match up.

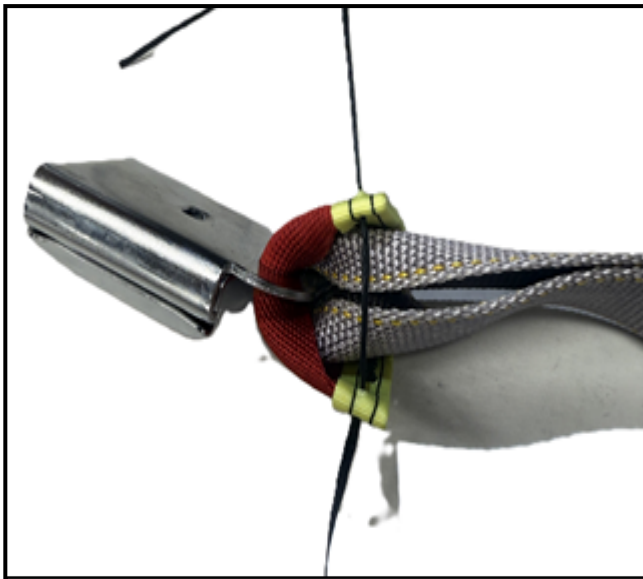
Step 6

Hand tack buffer where the folds meet to secure in place, tie it once to lock the two ends using surgeon/riggers knot tight. Make sure buffer and belly band center lines match.



Step 7

Adjust buffer and belly band to match centermark through buckle loop.

Step 8

Fold buffer over belly band hand tack top and bottom of buffer over belly band through type 3 tape, lock the two ends using surgeon/riggers knot tight on both sides of belly band.

Step 9

Do same to opposite side of belly band buckle.

Step 10

Complete !