



Mutant Main Riser Magnetic Retainer Installation

Overview

Field installation for Mutant main riser magnetic retainer

Personal

Approved Mutant jumper on Mutant ambassador

ENGINEERING DEPARTMENT

1645 LEXINGTON AVENUE ♦ DELAND FL 32724-2106 ♦ TELEPHONE +1 386 736 7589 ♦ FAX +1 386 734 7537

UPT@UPTVECTOR.COM ♦ WWW.UPTVECTOR.COM

Instruct-086 Mutant Main Riser Magnetic Retainer.doc

Step 1

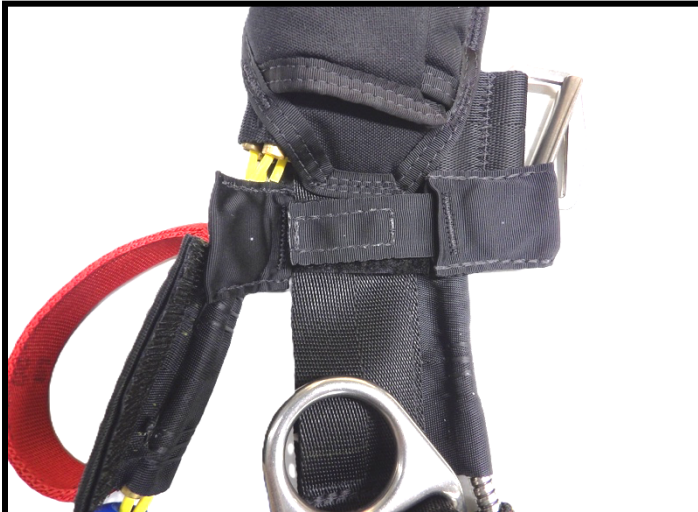
On the cutaway handle side, remove the cutaway handle from the harness placement; make sure the hook Velcro is facing up.



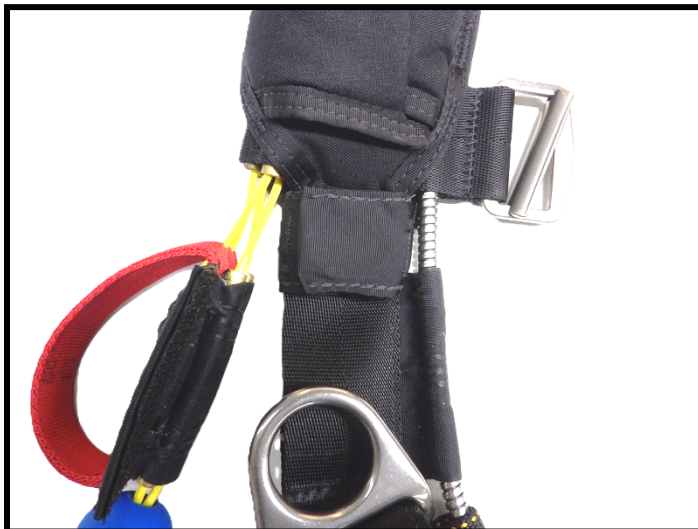
Thread the hook Velcro from underneath through the space between the main lift webbing and the housing, above the housing retaining webbing.

Step 2

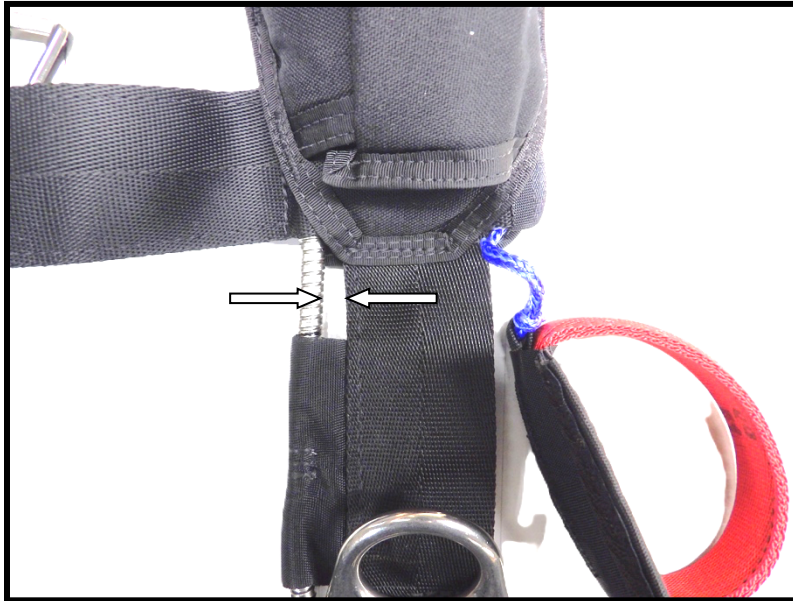
Between the cutaway handle and the main lift webbing, take the soft loop Velcro and lay it flat across the main lift webbing.



Secure the hook loop going across, on top of the soft loop, securing it in place.

Step 3

Secure magnets in place in whichever configuration is preferred.

Step 4

On the reserve handle side, remove the reserve handle from the harness placement; make sure the hook Velcro is facing up.



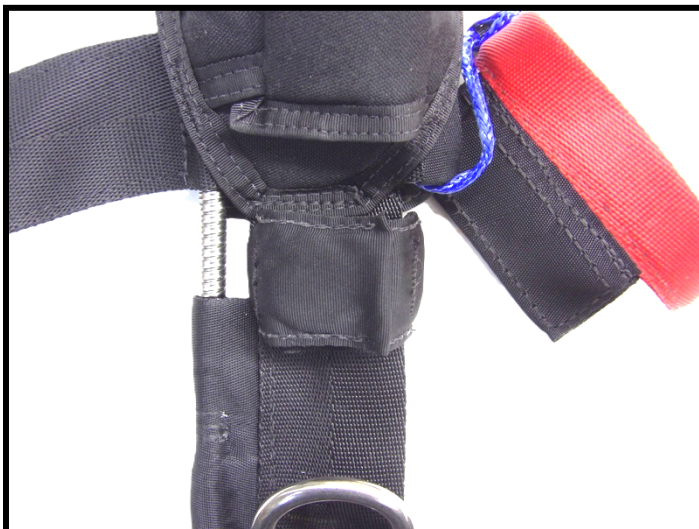
Thread the hook Velcro from underneath through the space between the main lift webbing and the housing, above the housing retaining webbing.

Step 5

Between the reserve handle and main lift webbing, take the soft loop Velcro and lay it flat across the main lift webbing.



Secure the hook loop going across, on top of the soft loop, securing it in place.

Step 6

Secure magnets in place in whichever configuration is preferred.



Complete!

