


UNINSURED **UNITED PARACHUTE TECHNOLOGIES LLC.**



## Removable Hook Knife Pocket

P/N: 045-004-013

(for -2 off the top option)

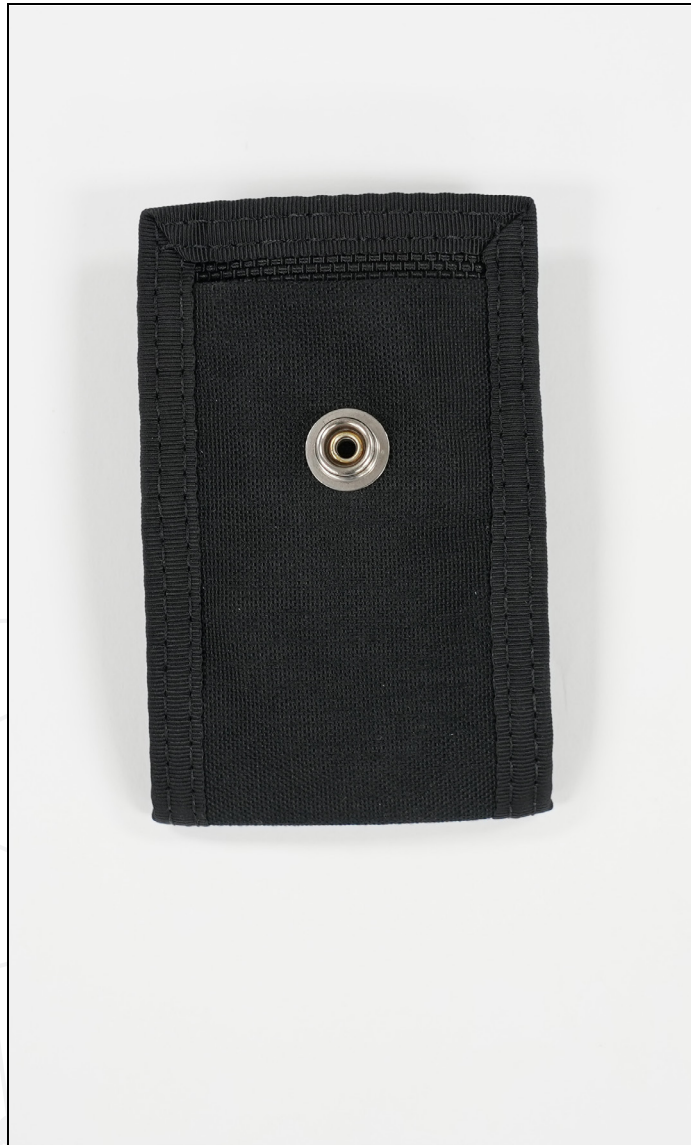

## ENGINEERING DEPARTMENT

1645 LEXINGTON AVENUE ♦ DELAND FL 32724-2106 ♦ TELEPHONE +1 386 736 7589 ♦ FAX +1 386 734 7537  
UPT@UPTVECTOR.COM ♦ WWW.UPTVECTOR.COM

**Step 1**

Orient hook knife pocket so snap is towards hip ring.

Identify hardware pad on front of leg strap.

\* procedure is the same for right or left side.

**Step 2**

Insert tuck tab underneath bottom of cover.



Insert fully to meet trim tape at fold seam.

**Step 3**

Fold pocket at seam towards top of legpad.

**Step 4**

Identify the back of the leg pad.

Be sure to clear locking tab to route around the webbing.



Locking tab should be routed between the legstrap webbing and the legpad trim tape:

Continue straight across backside of webbing.

**Step 5**

Tuck locking tab into keeper slot located on back of hook knife pocket.



Fig 5.1

Press into **fully** seated position.


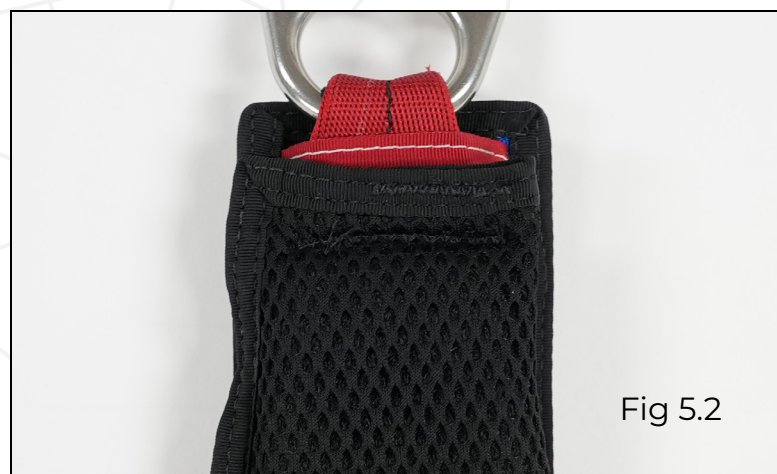


Fig 5.2

Locking tab is **correctly** routed.



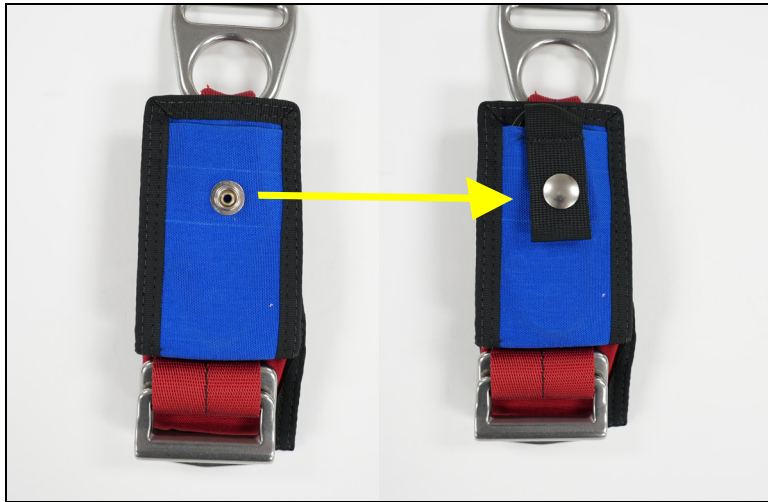

With pocket installed, hook knife may be placed into new holder.

Connect securing snap for hook knife.



Removable Hook Knife Pocket can be installed on **-2 off the top** legpads.

\* Fits **both** standard and rolled edge trim.

\* Can be installed on **left or right** leg pad.

